

For NEC MobilePro P300




Step: 1

Using the including head screwdriver remove the seven screws from the Case.



Step: 2

Using your finger pry open the case starting with one of the bottom corners of the PDA and work your way around the case. The back case cover should easily unsnap from the rest of the PDA. This will give us access to the battery and its power cable.

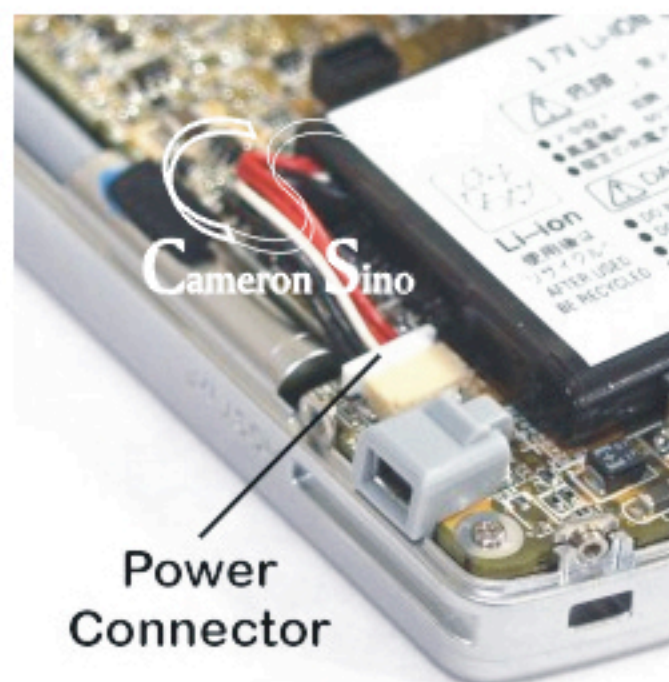

Step: 3

Disconnect the battery by gently pulling on the battery power connector. It should snap free from the socket on the motherboard. Connect the new battery power positioning the connector within the socket, pushing it in. Apply the new battery to have motherboard...it should slightly stick to the original glue spot.

Re-apply the back case cover and put back the seven screws.

Your new battery will need a minimum of three hours of charging before first use.